



OWNER'S MANUAL

Please read and understand all precautions prior to use.

Thank you for choosing a premium New Bright product.

USA & Canada 30-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in materials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This warranty does not cover damage resulting from unauthorized modifications, accident, misuse or abuse.

Should your item have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. If necessary, you will be issued a Return Authorization (RA) number and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales receipt, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (depending on your location).

 
New Bright Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation).

Valid only in the USA & Canada.


Contact New Bright Industries Customer Service Toll Free at:
1-877-NBI-TOYS
(1-877-624-8697)
Monday through Friday, 8:00 AM to 5:00 PM Eastern Time

WHAT'S INCLUDED


Component Checklist

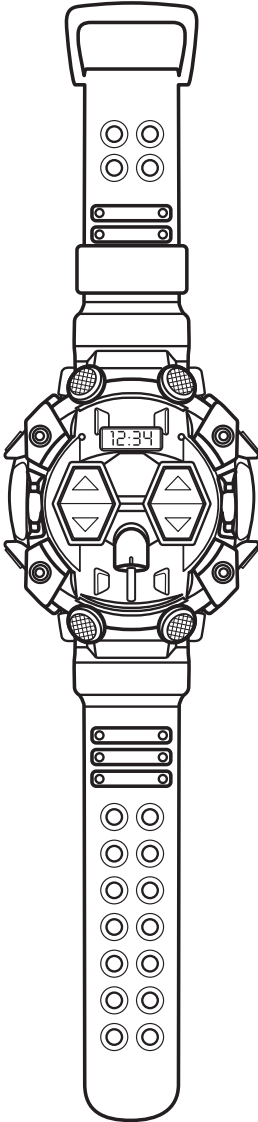

 
(1) Watch Band Transmitter

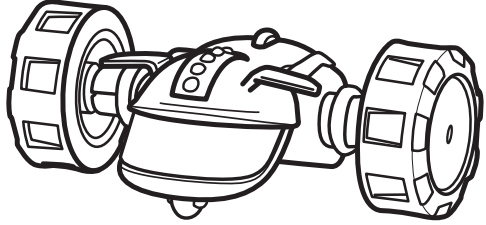

 (1) WatchDog Vehicle

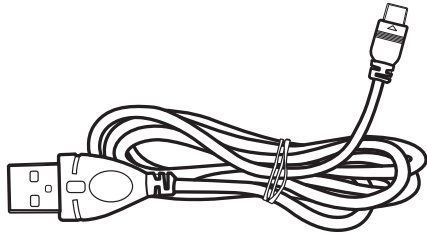

 
(1) USB Charging Cord

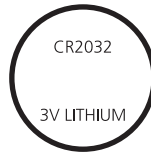

(1) 3V Lithium Coin Cell Battery (CR2032)*
*installed in watch

TRANSMITTER

 Changing the Main Battery

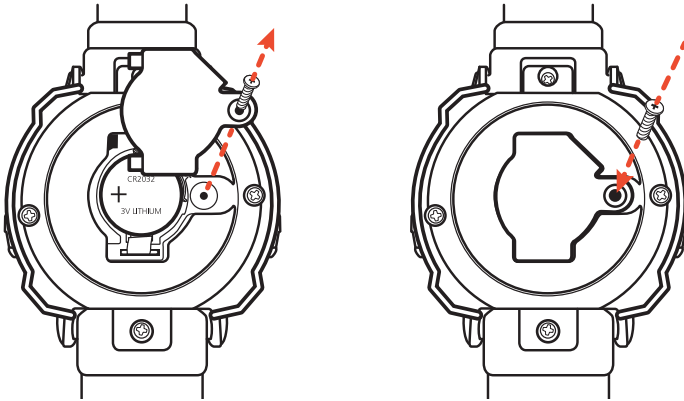

1. Locate Battery Compartment on back of watch body. Use a screwdriver to remove the screw, as shown above.
2. Using a fingernail, gently pop old coin cell out of place.
3. Insert one 3V Lithium CR2032 coin cell battery with the '+' mark is facing upwards.
4. Secure battery compartment by replacing the small screw.



WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns leading to death in as little as two hours. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Syncing

Vehicle and Transmitter arrive synced in the box. If vehicle and transmitter lose their connection, you will need to sync. Follow these steps to sync transmitter and vehicle:

 
1. Remove and replace battery in Transmitter. Follow the steps in the section titled 'Changing the Main Battery'.
2. Turn on Vehicle.

Once the batteries are installed and the vehicle is turned on, the Transmitter will sync automatically with the vehicle. This can take a few seconds.

The transmitter is equipped with 2.4GHz technology which allows up to 6 WatchDog vehicles to be used at the same time.

TRANSMITTER & WATCH


Functions

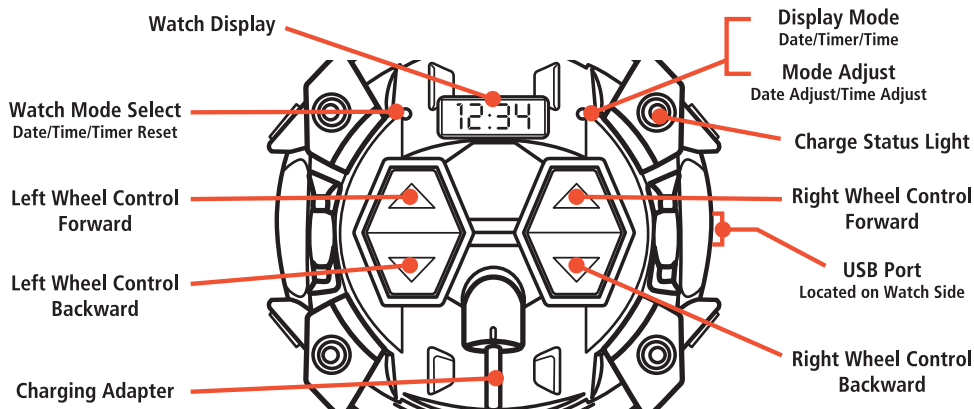

Adjusting Date, Time & Display Mode



 Mode Select: Date



Using a fingernail or small screwdriver, press Mode Select once to display the date.



Press Mode Select once more to enter Month Adjust Mode. To adjust the Month, press Mode Adjust until the desired number is displayed.



Press Mode Select once more to enter Day Adjust Mode. To adjust the Day, press the Mode Adjust until the desired number is displayed.

Mode Select: Time



Press Mode Select 4 times to enter Hour Adjust Mode. Press Mode Adjust until the hour is correct.



After adjusting the hour, press Mode Select once more to enter Minute Adjust Mode. Press Mode Adjust until the minute is correct.

Press Mode Select again to exit Time Adjust.

Press the Display Mode button to toggle through display modes.

 


*Timer will remember last known time. Press Mode Select Button to reset countdown to zero.



VEHICLE


Functions

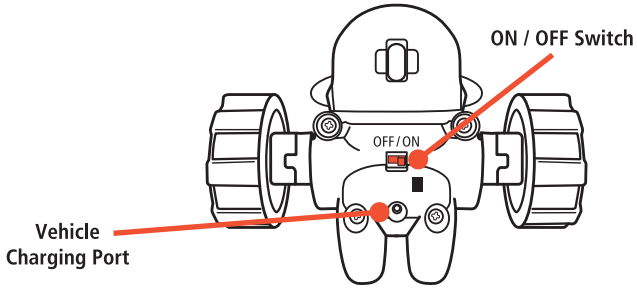

Charging

This vehicle is equipped with an internal Lithium-Ion battery that is recharged via USB.

 ON/OFF Switch must be in the OFF position prior to charging.

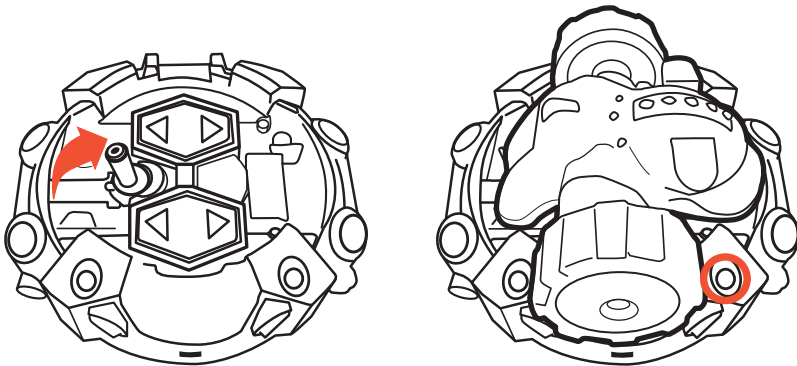


1. Locate the Charging Adapter on the face of the watch.
2. Carefully lift the Charging Adapter into the upright position, as shown above.
3. Locate the Charging Port on the underside of the WatchDog. Face of the dog should point toward the clock on the watch face.
4. Align WatchDog as shown above and seat into place on the watch face.
5. Locate the USB Port on the side of the watch case
6. Plug the small end of the supplied USB cord into the watch case USB Port. Plug the large end into any powered USB port, such as a laptop or power brick (not included).
7. When charging, Charge Status Light will glow red. Light will turn off when charging is complete.
8. Charging will take approximately 15 Minutes when charging from a computer. After charging is complete, store the USB Charging Cord in a safe place.

VEHICLE

How to Drive

 FORWARD AND REVERSE DRIVING

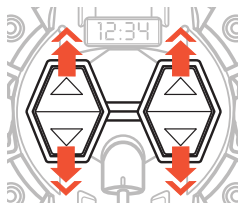

FORWARD DRIVING



 
Press **BOTH UP ARROWS** for Forward Driving.

REVERSE DRIVING



Press **BOTH DOWN ARROWS** for Reverse Driving.


TURNING

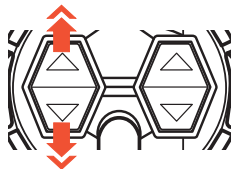

RIGHT TURNING

Press **LEFT Up Arrow** to turn right while driving forward.

 Press **LEFT Down Arrow** to turn right in reverse.

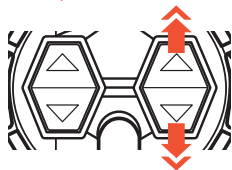


LEFT TURNING


Press **RIGHT Up Arrow** to turn left while driving forward.

Press **RIGHT Down Arrow** to turn left in reverse.

 SPINS

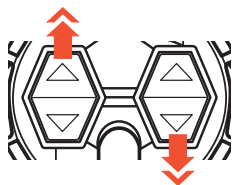






 
360° SPINS - Clockwise
Press buttons as shown for Clockwise Spinning.

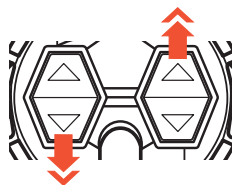

360° SPINS - Counter-Clockwise
Press buttons as shown for Counter-Clockwise Spinning.

PROPER USE

      Precautions and Care

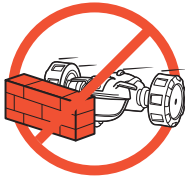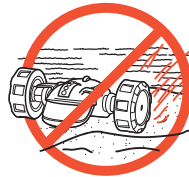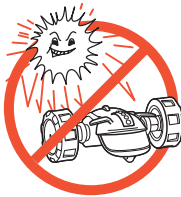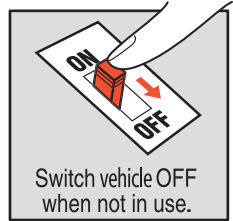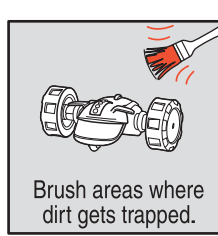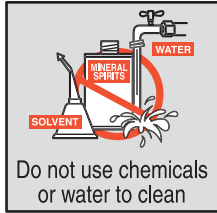

CAUTION!

Do not recharge Internal Battery if vehicle is hot or warm to the touch. Allow Battery to cool before recharging. Recharging a hot or warm Battery will shorten the life of the unit.

Do not recharge the Internal Battery if it appears to be damaged or leaking.

Always store charging cord in a safe place when not in use.

Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.

Do not attempt to disassemble or remove Internal Battery or charging adapter.

Only an adult should charge Batteries.

Do not attempt jumps or tricks with this vehicle.

Do not use included USB cord for anything other than its intended purpose.

Always remove Batteries from transmitter when not in use.

Trouble Shooting

Problem - Vehicle does not move or moves slowly.

- Has the rechargeable Internal Battery been fully charged?
- Make certain there is a fresh coin cell battery installed in the Transmitter.
- Is the coin cell battery installed with the etched lettering facing upwards and visible?
- Make certain that the vehicle ON/OFF switch is in the "ON" position.

Problem - Vehicle does not respond to Transmitter.

- It is possible the vehicle and transmitter are not paired. To sync transmitter with vehicle, follow the steps in the 'Syncing' section. If syncing is needed before first use of vehicle, it is not necessary to replace the pre-installed battery with a new one. Simply remove and replace with the original battery.

Note: Any time the main battery is removed or replaced, you will need to re-sync.

Problem - Vehicle moves by itself or exhibits reduced range from the transmitter.

- Make certain there is no outside radio interference in your area. The best way to test this is to take the vehicle as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.

FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.