


REMOTE CONTROL • FILOGUIDE • FERNLENKUNG • TELECOMANDO
MANDO A DISTANCIA • CONTROLO REMOTO • BESTUURBAAR OP AFSTAND
TÁVIRÁNYÍTÓ • ZDALNE STEROWANIE • DÁLKOVÉ OVLÁDÁNÍ • UZAKTAN KUMANDALI
ΑΠΟΜΑΚΡΥΣΜΕΝΟΣ ΕΛΕΓΧΟΣ • DIALKOVÝ OVLADAČ • ДИСТАНЦИОННОЕ УПРАВЛЕНИЕ

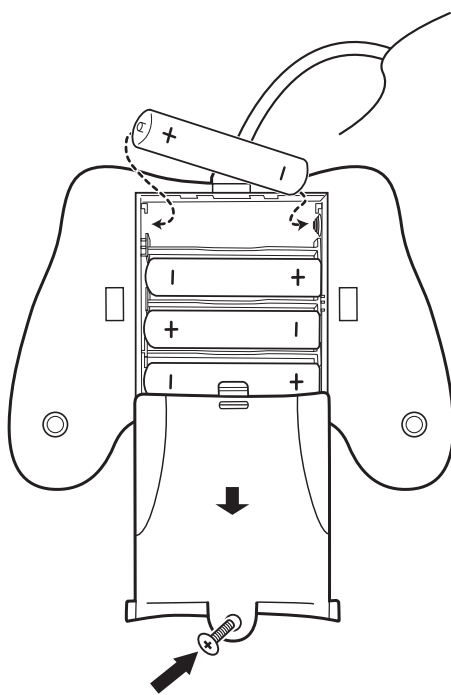

REF 06570607102

JN204-17

Battery Requirements:

4 "AA" Batteries

Battery Installation:

1. Remove screw and slide to open battery compartment cover on transmitter.
 2. Insert 4 "AA" batteries. Be sure the "+" and "-" are properly matched.
 3. Replace the battery cover and replace the screw.
- Do not mix old and new batteries.
 - Do not mix alkaline, standard or rechargeable batteries.
 - Alkaline batteries are recommended.

Model 560-2 (Excavator)

Features – Bucket Scoop & Dump:

- Manually raise and lower the Bucket arm and Bucket angle.

Forward and Reverse Drive:

- Push the BOTH joysticks forward together for Forward Drive
- Pull the BOTH joysticks back together for Reverse Drive.

Steering 360° Turn:

- Move the BOTH joysticks in opposite directions.

Model 560-3 (Loader)

Features – Bucket Scoop & Dump:

- Manually raise and lower the Bucket arm and Bucket angle.

Forward and Reverse Drive:

- Push the BOTH joysticks forward together for Forward Drive.
- Pull the BOTH joysticks back together for Reverse Drive.

Steering 360° Turn:

- Move the BOTH joysticks in opposite directions.

Model 560-5 (Dumper)

Features – Dumping:

- Manually raise and lower the Bucket for dumping.

Forward and Reverse Drive:

- Push the BOTH joysticks forward together for Forward Drive
- Pull the BOTH joysticks back together for Reverse Drive.

Steering 360° Turn:

- Move the BOTH joysticks in opposite directions.

Caution:

- Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.

Parents:

- Adult supervision recommended.
- Please remove all packaging attachments before giving this toy to your child.

We wish you many happy hours of pleasure with your New Bright toy.