 



- Section 1: Table of Contents
- Section 2: Component Checklist
- Section 3: Vehicle Features & Functions
- Section 4: Charging the Battery
- Section 5: Transmitter Battery Installation
Transmitter Features & Functions
- Section 6: Proper Use
Precautions & Care
- Section 7: Trouble Shooting & Support

- (1) R/C Vehicle With USB Cord
- (1) Transmitter
- (2) AA Batteries

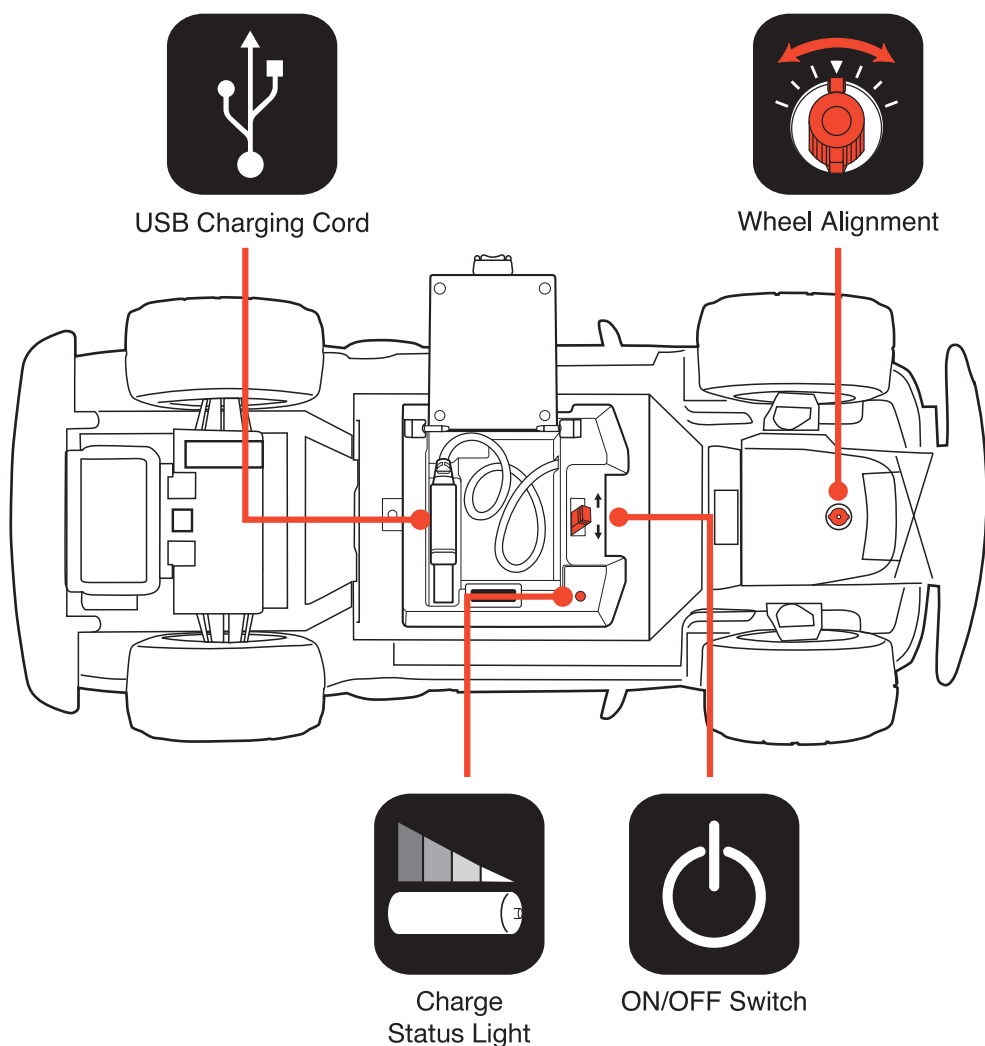


* If vehicle pulls to the left or right during forward driving the Wheel Alignment may need to be adjusted. The Wheel Alignment Dial is located on bottom of chassis between the front wheels.

 This vehicle is equipped with an internal Lithium-Ion battery that is recharged via USB. **ON/OFF Switch must be in the OFF position prior to charging.**

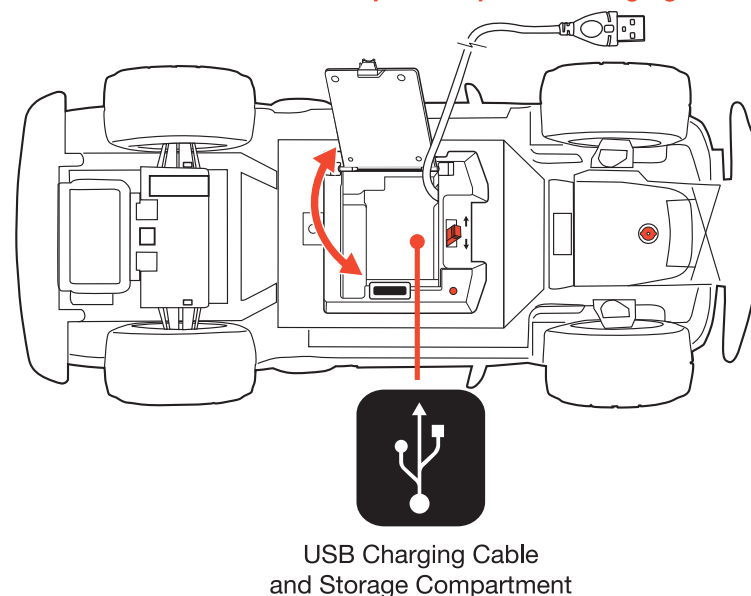

 1. Locate the ON/OFF switch and USB cord on the under-side of the vehicle.
2. Turn the ON/OFF switch to the "OFF" position.
3. Open Storage Compartment cover.
4. Remove USB cable from the Storage Compartment. (Use care when extending cord as it is attached to inside internal battery). Cord can be plugged into any computer or USB outlet brick (not included).



5. While charging, the LED under the vehicle will be on. Once fully charged the LED will turn off. Charging is completed in approximately 1 hour. Return cord and secure storage lid before operating the vehicle.