



OWNER'S MANUAL

Please read and understand all precautions prior to use.

USA & Canada 30-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in materials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This warranty does not cover damage resulting from unauthorized modifications, accident, misuse or abuse.

Should your item have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. If necessary, you will be issued a Return Authorization number (RA) and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales receipt, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (depending on your location).

New Bright Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation).

Valid only in the USA & Canada.

Contact New Bright Industries Customer Service Toll Free at:

1-877-NBI-TOYS

(1-877-624-8697)

Monday through Friday, 8:00 AM to 5:00 PM Eastern Time

Thank you for choosing a premium New Bright product.

 
L728103485/JN013-18

Component Checklist

To protect components from damage, they may be packed in the styrofoam tray out of plain sight. Please search styrofoam tray and remove all of the components shown below. Styrofoam should be saved for storing your watercraft.

- Watercraft
- Transmitter
- USB Charging Cord
- 2 AA Batteries
- 1 Antenna Tube

Battery Installation

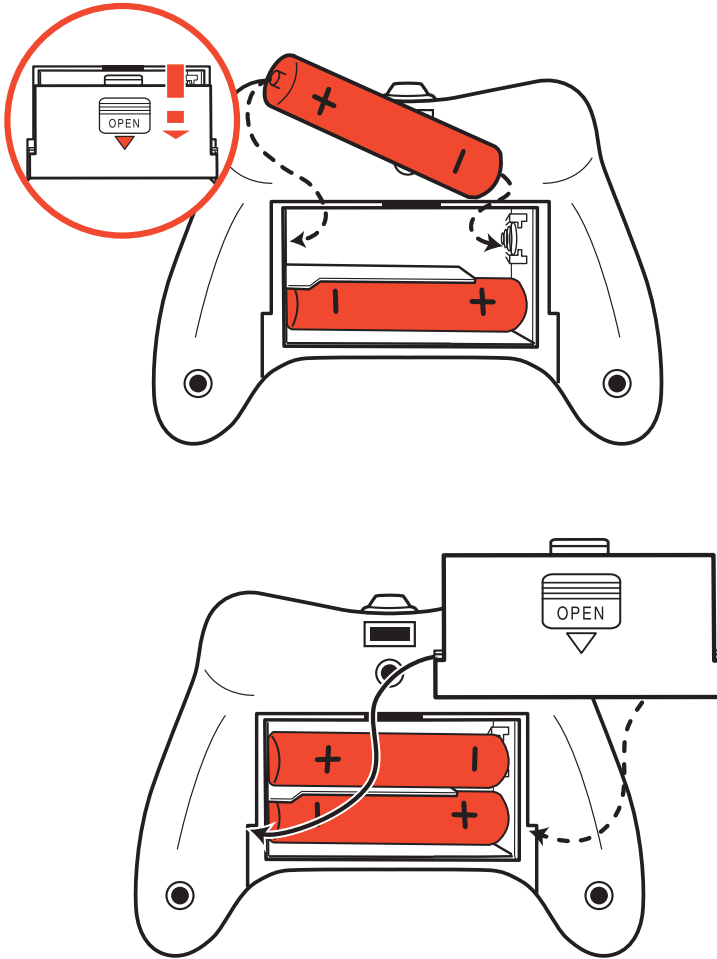


Note: When replacing batteries:

Use only Alkaline batteries.


Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

 
Features and Functions

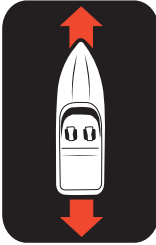

Forward / Reverse

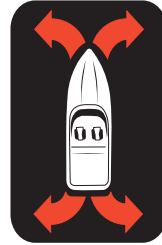 

Left / Right Steering

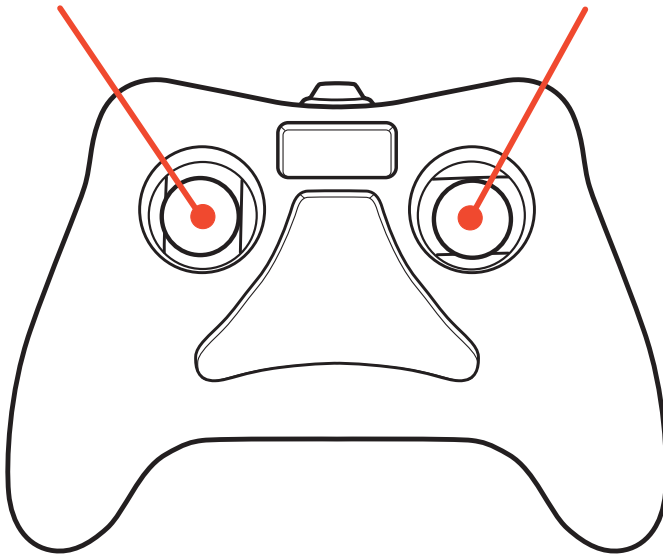 

This transmitter is equipped with 2.4GHz technology which allows up to 6 watercrafts to be raced at the same time.

 
 
The transmitter will automatically sync with the watercraft.

FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


External Features

Antenna Placement

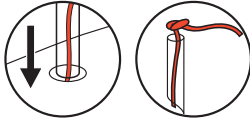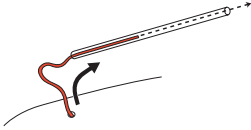

ON/OFF Switch

 Locking Tabs

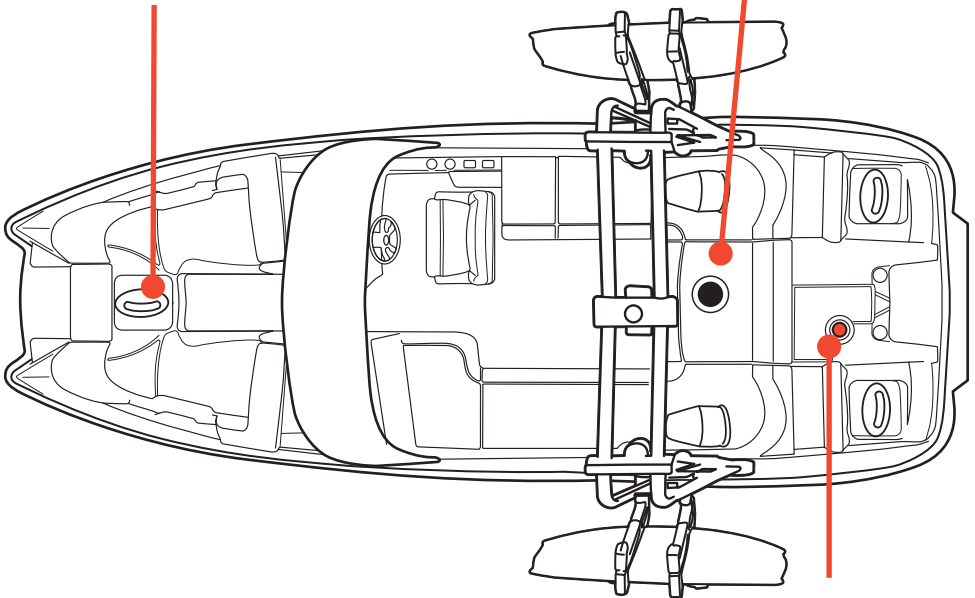


Setting Trim Control

Trim adjustment is located on top of boat near the back (as shown). Adjust trim for straight line driving.




Steering Trim*

 
Internal Features

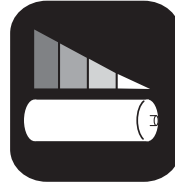

Charge Status Light

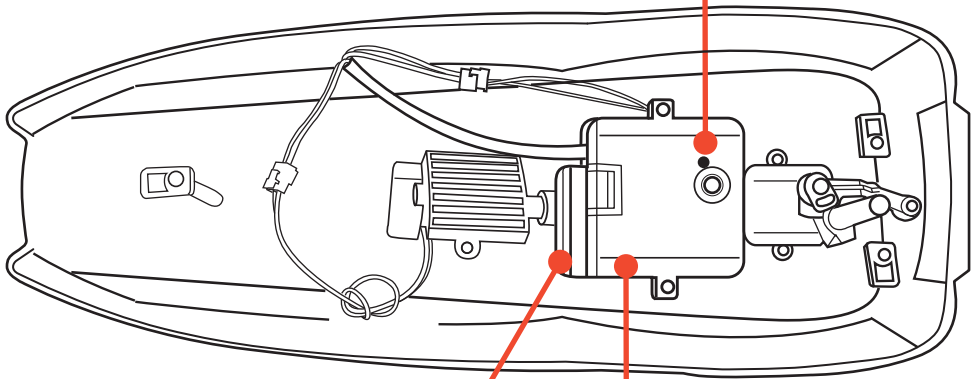 


Storage
Compartment
Door

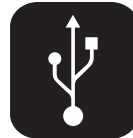 

USB Connector Compartment

Removing the Top of the Boat

 
1. Locate the ON/OFF switch on the top side of watercraft. See section 4.
2. Turn the ON/OFF switch to the “OFF” position.
3. To remove top of boat, unlock 3 tabs by turning in the indicated direction.
4. Pull top part of boat away to expose the inside of the hull.

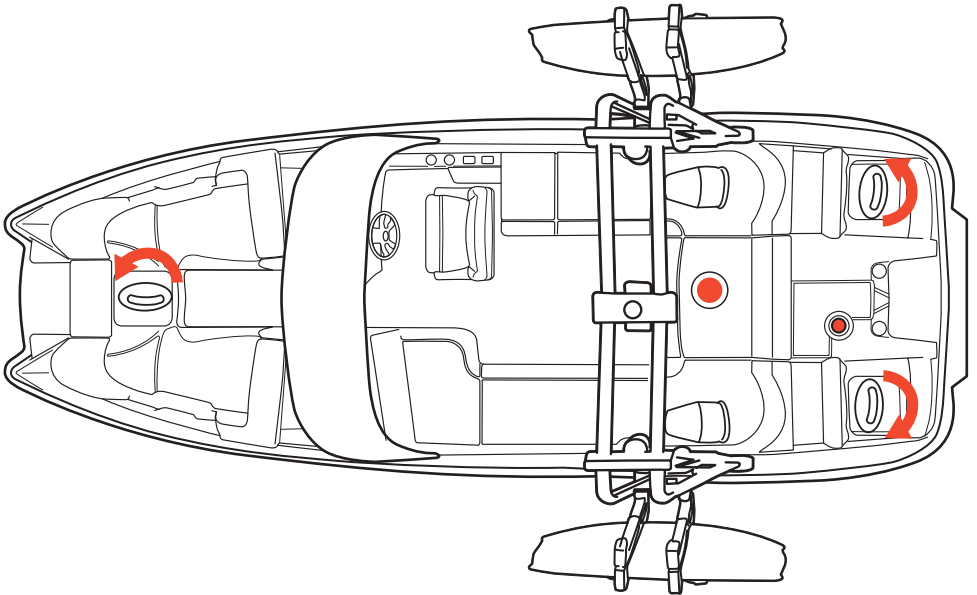


Charging the Watercraft

This Watercraft is equipped with an internal Lithium-Ion battery that is recharged via USB. **ON/OFF Switch must be in the OFF position prior to charging.**

 Follow instructions in Section 6 to remove the top of the Watercraft.

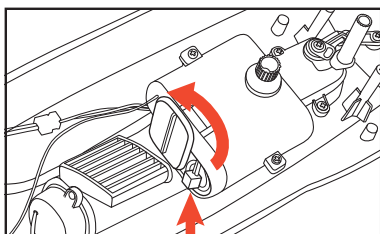

USB Connector

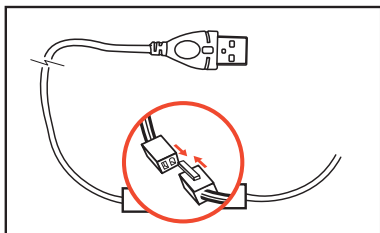 

1. Locate the USB Connector Compartment Door. See Section 5.
2. Use a finger to rotate the door open, as shown.
3. Locate the USB Connector and gently pull it out of the compartment. (Use care when extending cord as it is attached to inside internal battery)
4. Connect the USB Charging Cord to the Charging Connector as shown below.
5. USB Cord can be plugged into any computer or USB outlet brick (not included).

6. While charging, the LED in the Watercraft will be on. Once fully charged the LED will turn off. Charging is completed in approximately 2.5-3 hours.
7. After charging, disconnect the USB Cord and store in a safe place. Carefully tuck the connector back into the storage compartment and slide the door closed. Be very careful not to close door on wires.
8. Replace top of Watercraft .
9. Turn the three tabs on top of the Watercraft to lock into place.

 
Precautions and Care

Always switch watercraft off when not in use to save battery life.



Brush areas where dirt and dust get trapped.

Wipe body off with a soft rag or cloth.

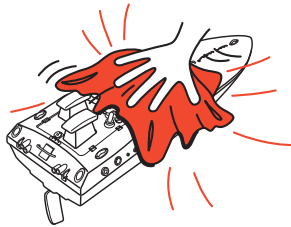

Do not clean watercraft with chemicals.

KEEP USB CONNECTOR COMPARTMENT DRY

It is possible that water can enter the inside of your watercraft during play. Periodically remove the top of the watercraft during use to remove any trapped water from the compartment. This should also be done at the end of each play session. Allow to dry completely before reassembling watercraft.

After play, always turn watercraft off. Remove 2 "AA" batteries from transmitter when not in use or when storing. Leakage may occur and cause damage if left for a long period of time.

Drain watercraft periodically and before storing. To drain watercraft, bring boat to a dry place, remove top portion, and turn watercraft upside down until all water is drained from the hull. Replace top of watercraft. Turn tabs to lock into place. Dry watercraft well before putting it away.

Operating and Caring

Radio waves control and drive the watercraft. Any of the following conditions may interfere with the behavior and function. The Transmitter signals can easily be interrupted. Caring for your Transmitter and watercraft is illustrated on these pages.

THIS BOAT IS ENGINEERED TO RUN ON THE WATER'S SURFACE. FULLY SUBMERGING BENEATH WATER WILL DAMAGE INTERNAL ELECTRONICS AND MECHANICAL PARTS.

- Do not operate in salt water.
- Do not operate watercraft where there are water plants, rubbish or other obstacles in the pond. This could damage or impair propeller.
- Do not play where there is strong water current or when there is strong wind blowing .
- Do not play outdoors during thunderstorms.
- Do not touch propeller while it is spinning. This is extremely dangerous.
- When lifting watercraft, be sure to hold the body securely.
- Be sure to bring the watercraft back to shore (out of water) before the battery power runs out.
- Do not operate watercraft in water without top of watercraft attached. Electronics must be covered when in use.
- Wipe clean with towel after playing.

Caution: Never use chemicals (including benzene, alcohol or thinner to clean).

CAUTION:

The rotating propeller is very dangerous. Never put your fingers close to the propeller when the watercraft is turned ON.



This Radio Control watercraft needs periodic fresh water cleaning and maintenance.

90% of all difficulties experienced with radio controlled watercrafts are due to either weak batteries or batteries that have been installed incorrectly. When batteries become weak, the watercraft may not necessarily stop completely. However, watercraft may exhibit slow response, slow speed or erratic behavior.

Problem - Watercraft does not move, moves slowly or moves sporadically.

- Make certain there are fresh alkaline batteries in the Transmitter and that they have been installed in the correct position.
- Are the plus (+) and minus (–) markings on the alkaline batteries in the same position as the plus (+) and minus (–) markings in the Battery Compartment of the Transmitter?
- Are the metal contact tabs touching, rusty or dirty in the Transmitter?
- Make certain that the watercraft ON/OFF switch is in the “ON” position.
- Has the watercraft been fully charged?

Problem- Watercraft exhibits reduced range from the transmitter.

- Make certain there is no outside radio interference in your area. The best way to test this is to take the watercraft as far away from radio towers, electrical lines or tall buildings as possible. If the watercraft operates correctly in the new area, radio interference was the problem.

Cautions

- Do not recharge the Internal Battery if it appears to be damaged or leaking.
- Always store charging Connector in storage compartment when not in use.
- Do not use included USB Cord for anything other than the intended purpose.
- Do not dispose batteries in fire. Leakage, explosion and personal injury may occur.
- Do not attempt to disassemble or remove Internal Battery or charging Connector.
- Only an adult should charge Batteries.
- Do not attempt jumps or tricks with this watercraft.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.